
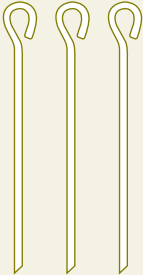




# ArborTie® AT LD100 PROFESSIONAL ANCHORING KIT


The ArborTie® Professional Anchoing Kit is the best way to secure trees in high wind areas or for any trees that need additional support. ArborTie® never damages the tree, and our tough steel eye stakes are easy to install.

AT LD100	KIT CONTENTS* * not drawn to scale	APPLICATIONS & FEATURES	
	 <p><b>STEEL EYE STAKES</b> (3) 15" Steel Eye Stakes Eye opening is 1" diameter</p>	 <p><b>ArborTie® GREEN</b> (3) 10' lengths of ArborTie® Green. Flat woven polypropylene material, lock stitch with rounded weave. 3/4" (1.9cm) wide, and 900lb. (409.2kg) break strength.</p>	<p><b>Applications</b> Professional anchoring of trees up to 3" in caliper.</p> <p><b>Carton Contents</b> 20 individually packaged ArborTie® Professional Anchoing Kits</p> <p><b>Features</b></p> <ul style="list-style-type: none"> <li>• 900 lb. break strength ArborTie® Green never damages bark</li> <li>• Reusable Steel Eye Stakes</li> <li>• Economical</li> <li>• Easy Installation</li> <li>• Made in the USA</li> </ul>


## INSTALLATION INSTRUCTIONS

- 


This end to stake

1. Tie a simple knot 18" - 24" from either end of the ArborTie®.
- 

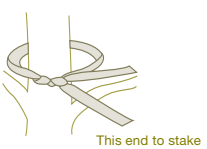
This end to stake

2. Wrap this end around tree. Begin a new knot below the knot that was tied in Step 1.
- 

This end to stake

3. Follow motion of ArborTie® as shown, finishing the knot by pulling tightly on points A and B at the same time.
- 

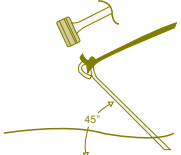
This end to stake

4. Slide the completed knot just up to the knot tied in Step 1. Fasten free end to stake.
- 


This end to stake

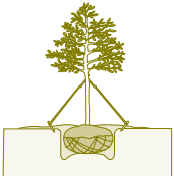
5. The ArborKnot® expands as the tree grows, providing secure, girdle free attachment of ArborTie® to tree.

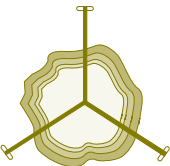
---

- 

45°

6. Secure long end of ArborTie® to the eye of the stake. Add tension to the ArborTie® by driving the stake into the ground outside of the planting hole at a 45 degree angle to the tree trunk.
- 

7. When driving the stake into the ground, make sure the eye opening is buried. Stake eye should be just even to soil level, as shown above.
- 

8. Stake should be placed outside of planting hole and driven into the undisturbed soil until the ArborTie® is taut.
- 

9. Repeat steps 6-8 for each remaining stake. Stakes should be evenly spaced around the tree base.