
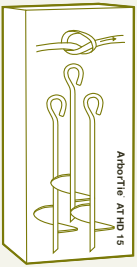
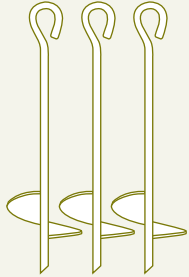




ArborTie® AT HD15 HEAVY DUTY ANCHORING KIT


The ArborTie® Heavy Duty Anchoring Kit is the best way to secure trees in high wind areas, or for any trees that need additional support. ArborTie® never damages the tree, and our tough steel eye anchors are easy to install.

AT HD15	KIT CONTENTS* * not drawn to scale	APPLICATIONS & FEATURES	
	 <p>STEEL EYE ANCHORS (3) 15" Steel Eye Anchors Eye opening is 1" diameter</p>	 <p>ArborTie® GREEN (3) 10' lengths of ArborTie® Green. Flat woven polypropylene material, lock stitch with rounded weave. 3/4" (1.9 cm) wide, and 900 lb. (409.2 kg) break strength.</p>	 <p>Applications Professional anchoring of trees up to 6" in caliper</p> <p>Carton Contents 1 individually packaged ArborTie® Heavy Duty Anchoring Kit</p> <p>Features</p> <ul style="list-style-type: none"> • 900 lb. break strength • ArborTie® Green never damages bark • Reusable Steel Eye Anchors • Economical • Easy Installation • Made in the USA


INSTALLATION INSTRUCTIONS




This end to anchor

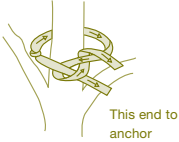


This end to anchor



This end to anchor

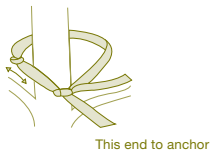

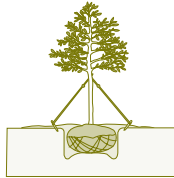
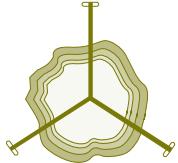


This end to anchor

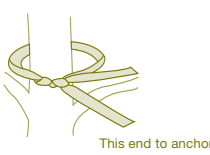

This end to anchor

1. Tie a simple knot 18" - 24" from either end of the ArborTie®.
2. Wrap this end around tree. Begin a new knot below the knot that was tied in Step 1.
3. Follow motion of ArborTie® as shown, finishing the knot by pulling tightly on points A and B at the same time.
4. Slide the completed knot just up to the knot tied in Step 1. Fasten free end to anchor.
5. The ArborKnot® expands as the tree grows, providing secure, girdle free attachment of ArborTie® to tree.

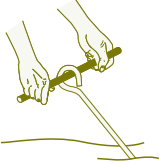6. Secure long end of ArborTie® to the eye of the anchor. Add tension to the ArborTie® by using a straight rod to turn (screw) the anchor into the ground outside the planting hole at a 45 degree angle to the tree trunk.
7. When screwing the anchor into the ground, make sure the eye opening is buried. Anchor eye should be just even to soil level, as shown above.
8. Anchor should be placed outside of planting hole and screwed into the undisturbed soil until the ArborTie® is taut.
9. Repeat steps 6-8 for each remaining anchor. Anchors should be evenly spaced around the tree base.